


Wood Venetian Blinds Installation Information

Parts Included

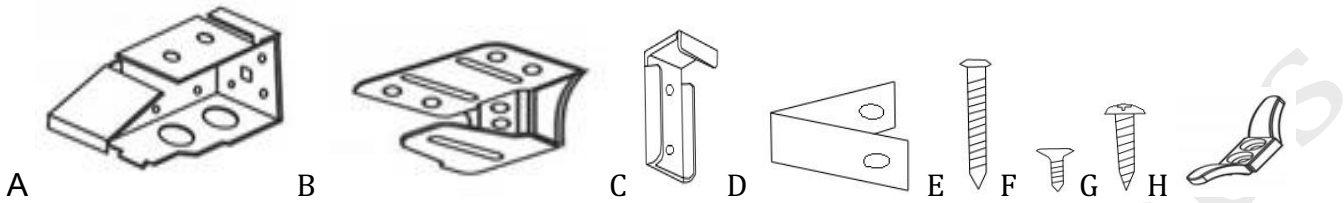

- A. Mounting Bracket
- B. Centre support bracket (if needed)
- C. Pelmet Clip
- D. Pelmet Return Clip (if needed)
- E. Bracket Screw
- F. Pelmet Screw
- G. Cord Cleat Screw
- H. Cord Cleat

Important Notes

Please check that all parts have been supplied before you begin to assemble your new Venetian Blind
 Ensure that the blind is mounted level for correct operation

Positioning Blind

As per your order, determine the correct fitting location of mounting brackets and mark where you are going to install the brackets.

- i) Inside the window frame (Inside Mount) or;
- ii) On the window frame or wall (Outside Mount)

Installing Mounting Brackets

The mounting brackets (part A) should be fitted 6mm past each end of the headrail using screw #1 (part E). If your blind is supplied with a support bracket (part B)(supplied for blinds over 800mm), position it closer to the cord lock end of the blind. Ensure the support bracket is in line with the mounting brackets (part A) (Figure 1)

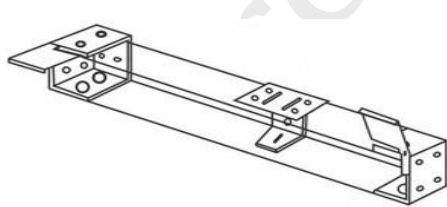


Figure 1

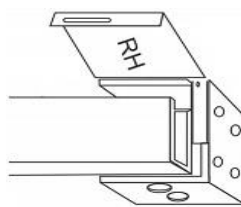


Figure 2

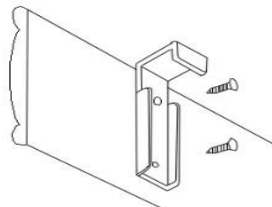


Figure 3

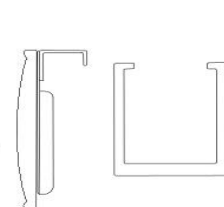


Figure 4

 


Figure 5

Attaching Blind To Brackets

Inside Mount

- i) Insert headrail into mounting brackets (part A) (Figure 2) and lock hinged flaps down to hold headrail in position
- ii) Screw the pelmet clips (part C) to the back of the pelmet supplied, flush with the top of the pelmet (Figure 3)
- iii) Hook pelmet clip with pelmet attached onto the top of the headrail (Figure 4)

Outside Mount

- i) Screw the pelmet clips (part C) the back of the pelmet supplied, flush with the top of the pelmet (Figure 2)
- ii) Insert headrail into mounting brackets (part A) (Figure 2) and lock hinged flaps down to hold headrail in position
- iii) Screw pelmet return clip (part D) onto the back of the pelmet and attach pelmet returns (Figure 5)
- iv) Hook the pelmet clip with the pelmet attached onto the top of the headrail (Figure 4)

Operating the Blind

Ensure slats of the blind are horizontal before lowering/raising to extend the life of the blind.

To lower blinds

Pull cord towards the center of blind until the cord lock releases. Gently feed cord upwards until the blind is at the desired height then move cord towards the pull cord mechanism and release. The cord lock will engage.

Raising the blinds

Pull cord downwards until the blind reaches the desired height, gently release the cord and the blind will lock automatically.

Tilting the blinds

Gently pull one of the tilt cords downwards to angle the slats as desired.


Reassemble Breakaway Tassel

The breakaway tassel is a safety device, and is intended to pop open when certain pressures are applied. Please follow the steps below to reassemble the tassel.

Ensure breakaway tassel is open

Place pull cords into grooves on one side of tassel

Snap tassel closed

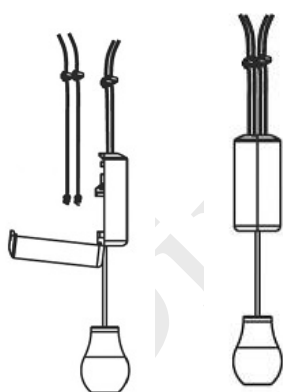

Venetian Blind Safety Information

Child Safety Instructions

For Blinds With Cord Control

Warning

The cord cleat (part H) must be fitted to ensure child safety and to comply with regulations

The cleat is to be positioned at least 1600mm above floor level, as a child is capable of unwinding a cord from a cleat

Use two 19mm screws to attach each cleat to the wall. Do not use tape or glue to attach the cleat

Wrap excess cord around the cleat every time the blind is raised/lowered, to prevent child strangulation

The cord must not form a loop longer than 220mm and should be wound entirely around the cleat every time

WARNING – ALL WINDOW COVERINGS WITH CORD OR CHAIN

To avoid creating a possible strangulation hazard for children, the corded or chained internal window covering must be installed in such a way that a loose cord or chain cannot form a loop 220mm or longer at a height of less than 1600mm above floor level.

A cord/chain guide may be installed lower than 1600mm above floor level if the cord/chain is sufficiently secured or tensioned to prevent a loop 220mm or longer being formed

If a cord/chain guide is installed lower than 1600mm above floor level, it must be designed to prevent a child from being able to remove the cord/chain

If a cleat is used to secure the cord, it must be at least 1600mm above floor level because a child is capable of unwinding a cord from a cleat